

DESK SHIELD INSTRUCTIONS (SG-DESK-2424 CORO)



1. Remove liner from both sides of PETG panels A, B and C.




2. Place cut side down on a flat surface (see image for cut side)




3. Insert rivet post into back of coroplast Panel D.
4. Place PETG Panel A on top coroplast Panel D lining up holes.
5. Snap rivet caps on rivet posts for each of the holes to secure Panel A to Panel D. Press firmly until you hear the rivets click together.




6. Repeat Steps 4 and 5 for Panel B and Panel C.

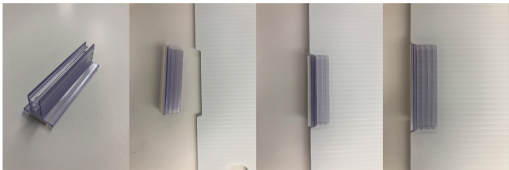

7. Insert gripper feet into notched area on bottom of sneeze guard,

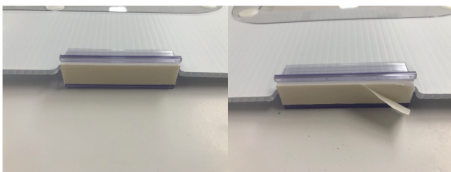

8. Remove adhesive liner.

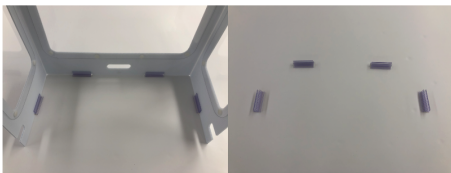

9. Place on desk and press firmly to secure.



Guard can be removed and replaced for next student.